



Factory reset an ADC-V729/V729AC/VC729P to its default settings

Resetting a video device to its factory defaults removes all programming from the device.

Important: Wait at least two minutes for the video device to power on fully before performing the following procedure. The factory reset might fail if the device is still powering on.

Reset procedure

1. Press and hold the reset/WPS button for at least 15 seconds until the LED starts blinking red and green.
2. Wait for the device to reboot.

Reset button location

The reset/WPS button is located on the back of the camera.

Reset button image

