

What do the LEDs on the 4MP Outdoor Wi-Fi Spotlight Camera (ADC-V730) mean?

LED reference guide

LED pattern

Description

Off

Power off



Solid green

Connected to Alarm.com



Blinking green

Local network connection



Blinking red

Power on, camera booting



Solid red

No local or internet connection



LED pattern

Description

Blinking white



Bluetooth and Wi-Fi Access Point modes (press and hold the button for 3-6 seconds)

Blinking blue



WPS mode (press and hold button for 6-9 seconds)

Blinking yellow



Power cycling (press and hold button for 9-12 seconds)

Blinking red and green



Reverting to factory default settings (press and hold the button for 12-15 seconds)

Blinking green and blue



Firmware updating